



## WIRING INFORMATION

- (1) Loosen Outside Screws, separate inner parts and cover shell as shown
- (2) Cord Gripping Range: 3 Conductor Round Cord Only, 12 AWG/3C, Type: SJT
- (3) If polarization is required. Select proper end of cord as shown below.

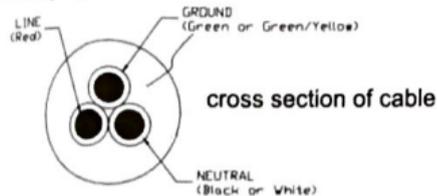


- (4) Cut and Strip Jacket and Inner Jacket as show,

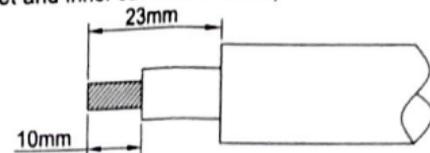


- (5) Twist strands together- Do not tin Conductors.
- (6) Loosen inside all terminal Screws.
- (7) Insert proper Conductor between clamp nut and terminal.  
Tighten terminal screws 12 lbs-inch
  - a. Connect grounding conductor (Green or Green/Yellow) to terminal marked (G)
  - b. Connect neutral conductor (Black or White) to terminal marked (N)
  - c. Connect Line Conductor (Red) to terminal marked (L)
- (8) Arrange the overall Jacket in right position, and tighten the screw in tight position.
- (9) After assembly all parts in right position then put back the cover shell.

NC-P303

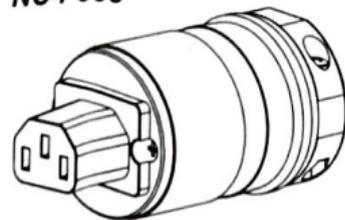

NC-P313

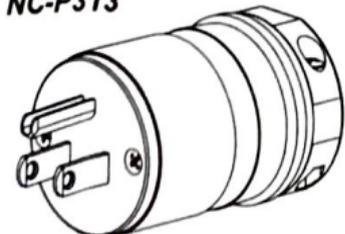

NC-P312

